


LANE-75

LANE-75

INSTALLATION INSTRUCTIONS DUMMY KNOB


1. MARK DOOR

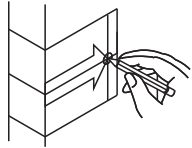

Start approximately 1000mm from floor. Fold and apply template to high edge of door bevel and mark center hole on door face through guide on template for 60mm or 70mm backset.

2. INSTALL KNOB


A. Drill 10mm hole through door face as marked.

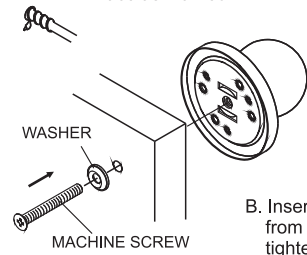

B. Insert machine screw from inside of door, then tighten with knob.

133x65(mm)

(正面)

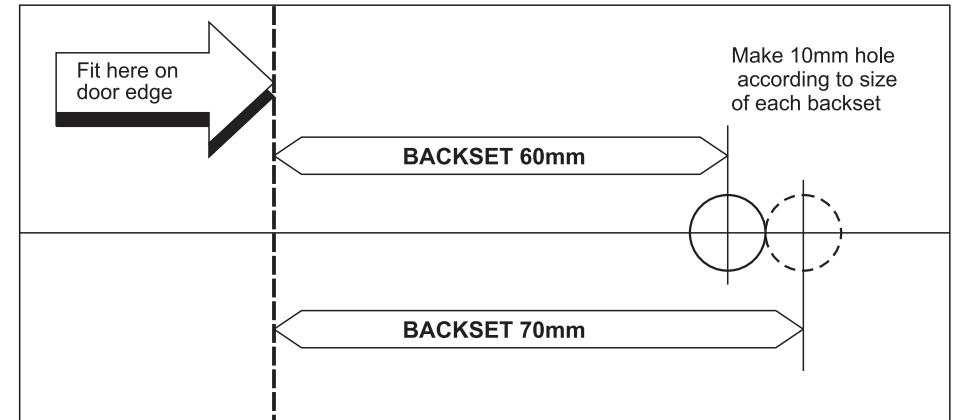


(背面)


LANE-78

LANE-78

INSTRUCTION FOR INSTALLATION OF DUMMY LEVER/KNOB

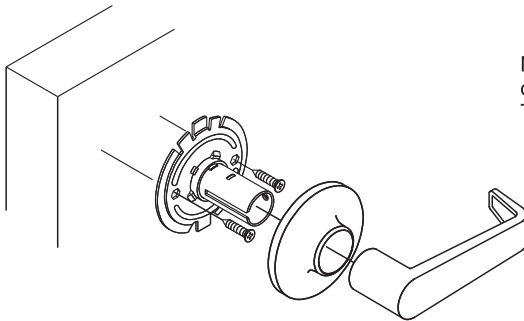

Measure 1000mm from bottom of door or any suitable height. Tighten screws to fix directly.

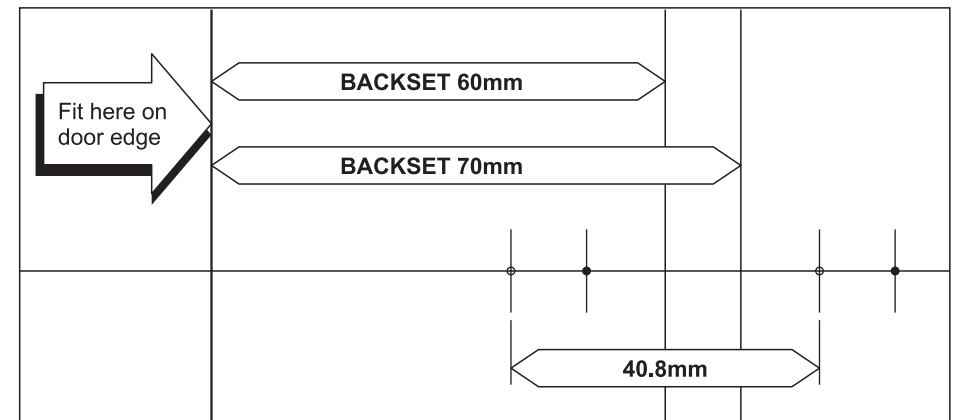

(背面)

133x65(mm)