



LANE  
**TOUCH**  
PLUS

# INSTRUCTIONS

Thanks for choosing Lane Touch Plus. This is a short version of the instructions (full version in the box) highlighting the additional steps in installation compared to the original Corvan product.

## SETTING THE HANDING: OUTSIDE PLATE

If the lever does not require rehanding go to step 10

1



The lever handing stopping block for the outside plate is shown here in yellow.

2



Simply undo and remove the screw that holds the lever handing stopping block.

3



Remove the lever handing stopping block.

4



Pull down on the handing pin (shown here in red) to free the lever.

5



Then rotate the lever over the top of the plate to the opposite position in the same way as was done for the inside plate. The handing pin can be released once the lever is rotated.

6



Now remove the handing pin with a flat head screwdriver.

7



Reposition the handing pin in the hole on the opposite side. ensure that the handing pin is screwed in securely.

8



Once the handing is complete, reverse the lever handing stopping block, so that the 'L' shaped locking plate locks down behind the cam assembly, preventing the lever from rotating back to its original position. Replace and tighten the screw and the handing is complete.

9



Before installing the plate, ensure that the handing pin is on the same side of the plate as the lever, as shown here.



LANE  
**TOUCH**  
PLUS

## INSTRUCTIONS

### INSTALLING THE LOCK SET

9



Insert the spindle into the lever cam assembly in the outside plate.

10



Place the outside plate against the door. The bottom tail (black) MUST BE in the horizontal position and pass through the deadbolt '+' section.

11




Sleeve the two long metal thread screws through the two bobbin head washers. Insert into the top and bottom fixing holes.

12



Secure the outside plate with the two long metal thread screws.

13

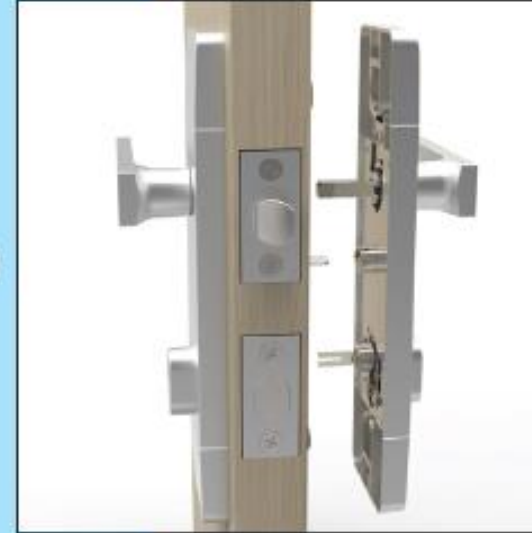

Insert the spindle into the lever cam assembly in the inside plate, then place the inside plate against the door. The bottom tail (silver) MUST BE in the vertical position and pass through the deadbolt '+' section.

14



1) Align and insert the square spindle first.  
2) Then press the privacy button to ensure orientation.  
3) Align and insert the centre linkage.  
4) Insert the silver bottom tail (vertical) into the '+'

15



securely tighten the grub screws with the ball nose allen key provided.

16



When you are positive that all locking operations work, push in place the screw covers supplied.