




Do's for Plasterers for Better Installation Practices

Do Install fire grade linings in accordance with manufacturer's recommendations.




Do stagger sheet joints on double layer systems.

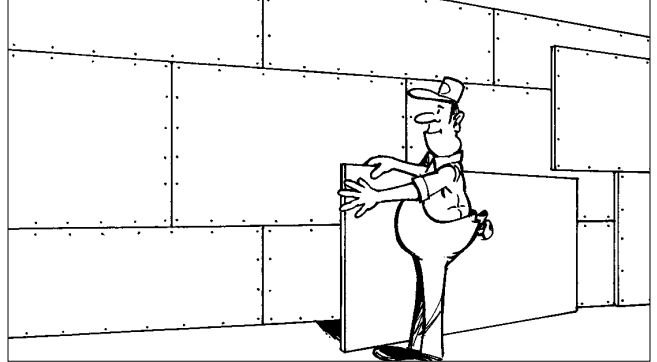


Do remove debris from cavities before sheeting. Debris can be a major source of bridging.




Do continue wall sheets to full height and seal all gaps.

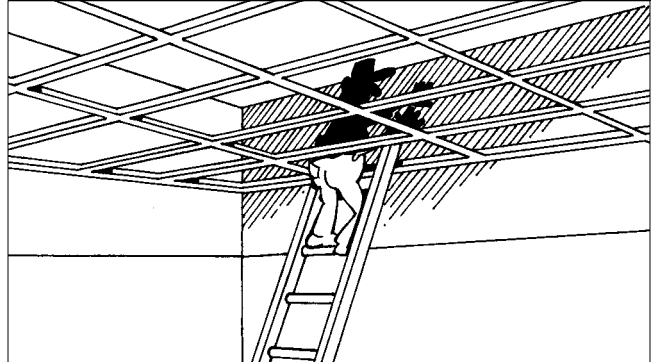


Do use mechanical fasteners to install fire grade linings.

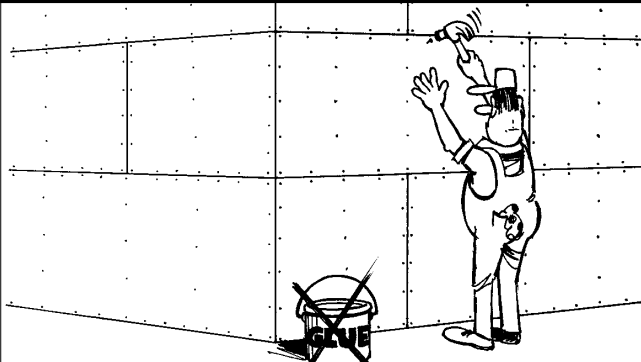


Do install sheets with a 10mm gap at the floor to allow for frame movement.

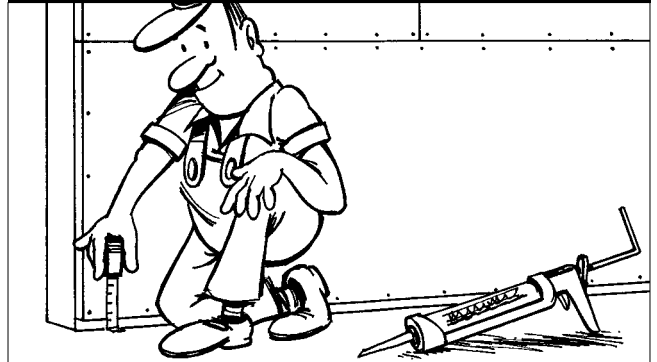

Do use longer nails when fixing second layer.

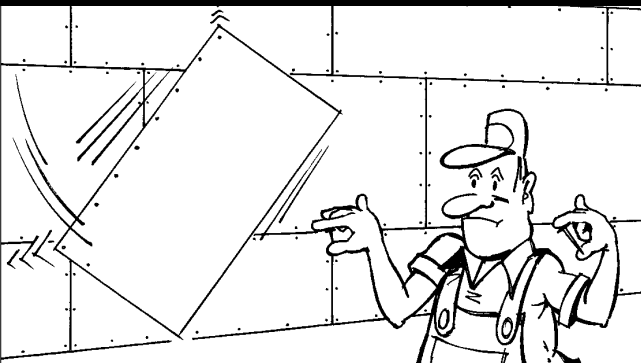


Do make an air-tight seal at the perimeter and all penetrations.

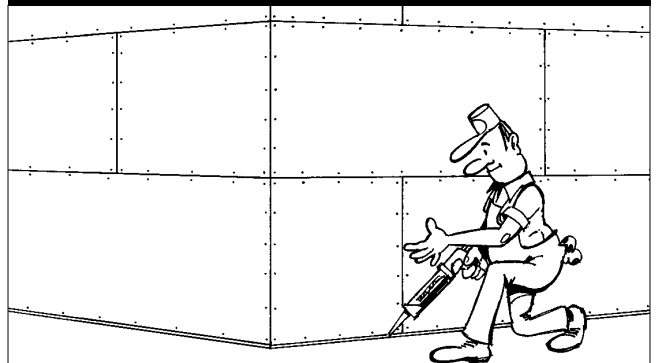




Don'ts for Plasterers for Better Installation Practices


Don't use adhesive to fix fire grade linings (use fasteners only).

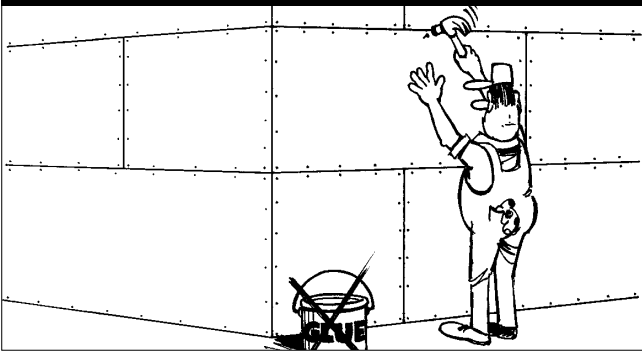

Don't fix ceiling lining directly to floor joists.

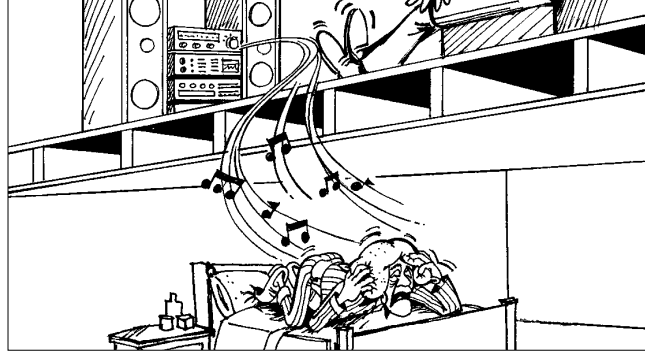


Don't over-drive clouts, thereby damaging the face paper or core.

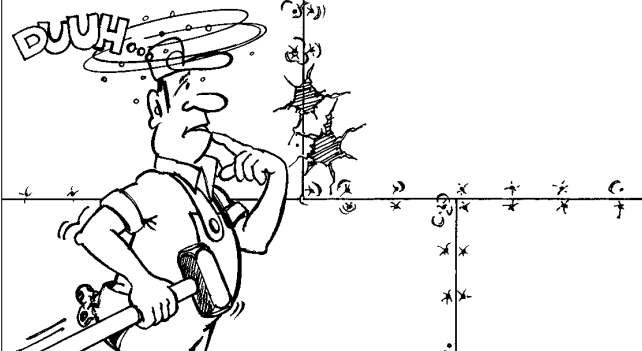


Don't locate electrical fittings back to back in party walls.




Don't use cracked or broken fire grade linings.

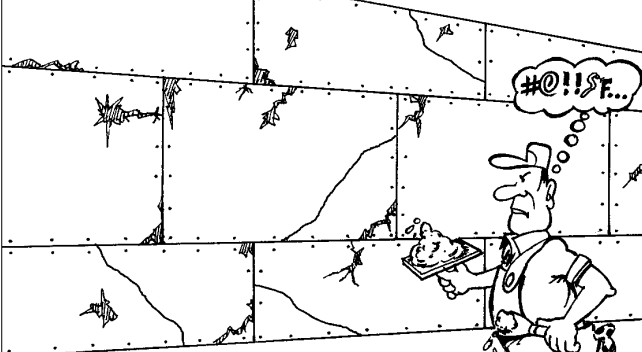

Don't leave gaps around plumbing or electrical penetrations.

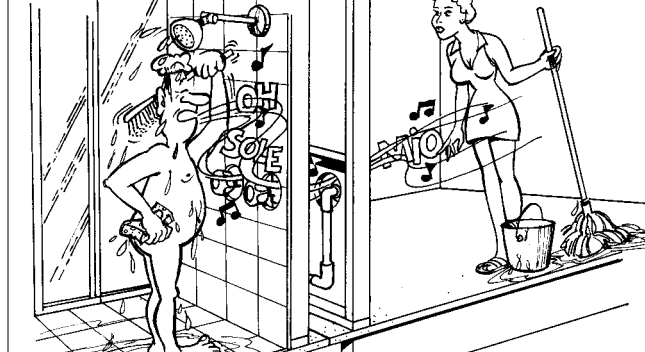

Don't use standard linings where fire grade linings are required.

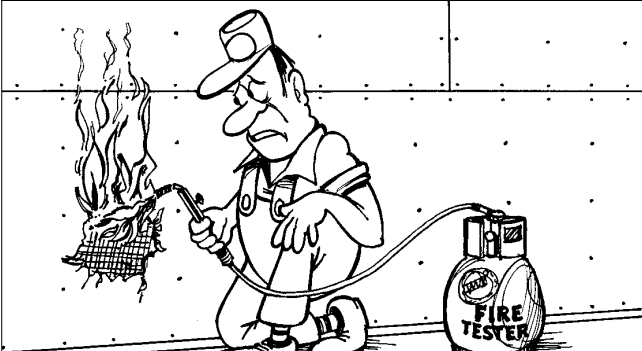

Don't install bath until wall is sheeted to floor and all gaps sealed.

