

## **Description**

The WallMate<sup>TM</sup> is the original self drilling plasterboard anchor. Available in nylon or zinc, the WallMate<sup>TM</sup> would probably be the quickest and easiest plasterboard anchor to install and remove.

## **Specification**

Material	Nylon, Zinc Composite			
Corrosion Protection	-			
Head Style	Flush - Phillips #2			
Fixing Method	Fixture Aligned			
Setting Method	Rotation			
Anchoring Method	Thread Forming			
Screw Gauges	6-8			
Drilled Hole Diameters*	8mm			
Anchor Lengths	42mm			
Minimum Screw Length	20mm			
Substrates	Plasterboard, Dry Partition Walls, Aerated			
	Concrete (with 8mm pre-drilled hole)			

\*For pre-drilling into aerated concrete

## **Related Products**

Drill Hole Cleaning Pump\* Wet and Dry Vacuum\* \*For installation in aerated concrete Drill Driver Screw Gun Drill Bits



### **Features & Benefits**

 Both versions of the WallMate<sup>™</sup> feature an effective drill point for easy penetration of plasterboard and fast installation. If a long screw is used, this point will break away so as not to restrict achievement of a firm fix.

- The anchor's screw thread profile is designed for efficient cutting and positive grip.
- Both the screw and the WallMate<sup>™</sup> can be easily removed without losing the anchor inside the cavity.
- The low profile head allows for flush fixing.




# WallMate<sup>™</sup> Plasterboard Anchors

# **Trades & Applications**

	Miscellaneous Trades	Plumbing Contractor	Electrical Contractor	
Light Hook/Bracket Installation	<b>v</b>			
Electrical Fitting Installation			~	
Bathroom Accessory Installation		✓		

### Installation

- 1. Insert the point of a #2 Philips Head screwdriver into the recess of the WallMate<sup>™</sup>, place the drill point against the wall, lightly piercing the face paper, and screw the anchor into the plasterboard until the head is flush with the surface.
- 2. Place the fixture over the anchor, insert the appropriate gauge screw through the fixture, into the head of the WallMate<sup>™</sup> and tighten the fixture in place.

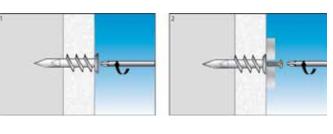





### WallMate<sup>™</sup> - Plasterboard Anchor

Part No	Anchor	Min Screw	Drilled Hole	Screw	Body	Order	
	Length (mm)	Length (mm)	Ø* (mm)	Gauge	Туре	Qty	
WMZ	42	20	8	6-8	Metal	100	
WM25	42	20	8	6-8	Nylon	100	

\* For pre-drilling into aerated concrete